 


INSTRUCTIONS

 
FOR FIRST TIME USE: SOLAR LIGHT NEEDS TO CHARGE IN FULL SUNLIGHT FOR 8 -12 HOURS WITH THE SWITCH IN THE "ON" POSITION TO FULLY CHARGE THE BATTERY.

INSTALLATION

Tools Required

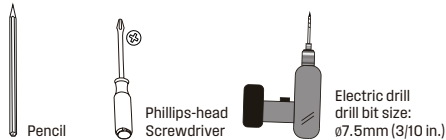

Hardware Included

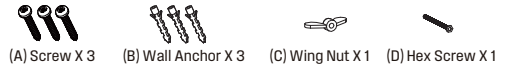

Parts



- Carefully remove the fixture from the carton and check that all parts are included. Be careful not to misplace any of the screws or parts needed for installing the fixture.
- Insert the extension arm (G) into the side access of the lamp (E). Put the hex screw (D) through the opening with the recessed hex hole. Secure and tighten with wing nut (C). (Figure 1)

- Align the holes on each side of the lens/reflector (F) with the screws (H) on each side of the lamp (E) and attach the lens/reflector (F) to the lamp (E) and turn the lens/reflector (F) to lock in place and tighten the screws (H). (Figure 2)

 
 
 
NOTE: Screws (H) should be pre-threaded on lamp (E).

- Locate the light fixture 6.5 feet (2 m) at least above ground on a solid surface capable of supporting the light fixture and secure enough so that it will not move when exposed to vibrations or wind. The light fixture must be high enough to allow for motion detection and light distribution. (Figure 3)

- Mark the hole locations of the light fixture then set the light fixture aside. Check that the marked areas are clear of obstacles such as cables and electrical lines. Drill holes for the enclosed screws and wall anchors. Insert the wall anchors then secure the light fixture in place with the screws. (Figure 4)

Slide the light power switch to "ON" position, the light will turn on automatically at night when motion is detected.

- Light delivers up to 4000 lumens on a full charge.
- Standby mode 100 lumens.
- Motion Sensor Detection Distance up to 16 feet (5 m).
- Motion Sensor Detection angle up to 120 degrees.

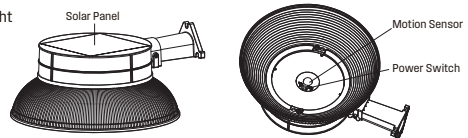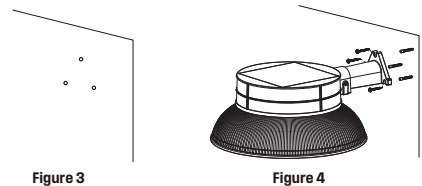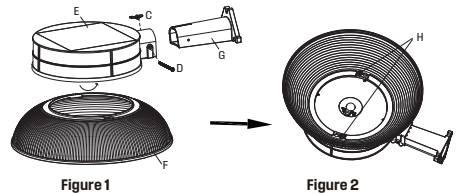


TROUBLE SHOOTING

If light doesn't turn on, check the battery to ensure that it is making secure contact with the terminals. If this doesn't work, replace with a new battery.

REPLACING THE BATTERY

- Slide the power switch to the "OFF" position.
- Use a Phillips head screwdriver to remove the 8 screws holding the LED panel in place.
- Remove the 3 screws holding the motion sensor base in place.
- Remove the 2 screws holding the battery compartment in place.
- Pull up and replace old batteries with 4 new 3.7V, 2000 mAh lithium (18650) rechargeable batteries.
- Replace the battery compartment and the LED panel by aligning them properly and replacing the 13 screws removed earlier.
- Slide the power switch to the "ON" position.

 For optimal performance, allow light fixture to charge in full sunlight for 8-12 hours, to fully charge the battery.

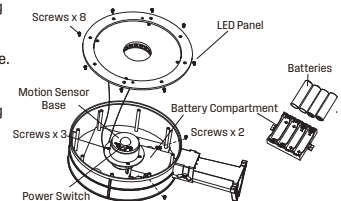

WARNING: Do not dispose of lithium batteries in municipal waste stream or by fire as batteries may explode. Do not open, short circuit, or destroy batteries. Dispose of batteries in accordance with Local, State, and Federal regulations. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium, nickel metal hydride or lithium ion) batteries.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Company Name: Rayman Lights Inc.

Company Address: 2020 Firedancer Ln, Bear, DE 19701, USA

Telephone Number: 1-888-445-8974

LIMITED WARRANTY

1. During the one-year warranty period, we provide services including refund or replacement without charge to those who use the device in accordance with the user manual.

2. This warranty does not cover:

- (A) Failure or damage due to the improper use, repair or remodeling.
- (B) Failure or damage because of falling.
- (C) Failure or damage caused by fire, earthquake, flood, lightning and other natural disasters.
- (D) Failure or damage when used other than its intended use.
- (E) Failure or damage caused by the third-party products other than this device.

To ensure full warranty coverage, this product must be purchased from an authorized retailer. Purchases made through unauthorized third-party sellers will void all warranty protections. This includes eligibility for product replacements, repairs, or customer support. Please retain your proof of purchase from an authorized source.

DO NOT RETURN THIS PRODUCT TO THE STORE

If you have questions or need assistance, please Email Support@solarlights.Westinghouse.com or call customer service at 1-888-445-8974.

® and Westinghouse are trademarks of Westinghouse Electric Corporation. Used under license by Rayman Lights, Inc. All Rights Reserved.