

SAFETY INFORMATION

READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE USE

 
- This unit is not waterproof. Do not immerse the unit, the charger, or adapter in water or any other liquid.
- Use only as intended. Do not use this unit for purposes other than its designated use.
- Charge indoors only.
- Do not expose the internal battery to fire or extreme heat, as it may cause an explosion.
- Do not place or store the unit where it could fall into a tub, sink, or any other water-filled area.
- Do not clean the product using a water spray gun or similar high-pressure methods.
- Supervise closely when this product is used near children.
- Use only accessories recommended or sold by the manufacturer.
- Use only the USB charging cable provided with this product to charge the internal battery.
- Do not operate the unit if it has been dropped, hit sharply, or otherwise damaged in any way.
- Never look directly into the light or shine it into another person's eyes while it is illuminated.
- If using an AC charger from another appliance, plug the USB cable into the unit first, then connect to the power source.
- Do not cut, pull, or expose the USB charging cable to extreme heat.
- Do not disassemble the housing. There are no user-serviceable parts inside.
- When disconnecting the USB cable, pull by the plug, not the cord.
- This unit contains rechargeable batteries. Although it comes partially charged, it must be fully charged before first use.
- Recharge the unit after each use, or at least every 6 months to maintain battery health.
- Position the USB cable so that it stays untangled and does not create a tripping hazard.
- Do not attempt to charge the unit if the charger or cable is damaged. Contact the manufacturer for a replacement.
- Keep the charging adapter and power cable away from sharp corners and edges.

PREPARATION

- Before operating this product, ensure all parts are present. Compare the included parts with the Package Contents List and Diagram on this page.
- Please contact Customer Service for replacement parts.
- Review these instructions and diagrams thoroughly before starting.


PART INCLUDED

A - Work Light

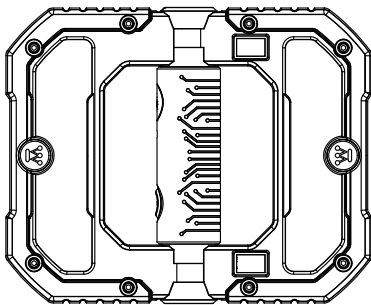


ACCESSORIES INCLUDED

 A - USB Type-C Charging Cable

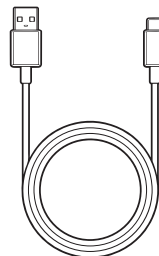

OVERVIEW

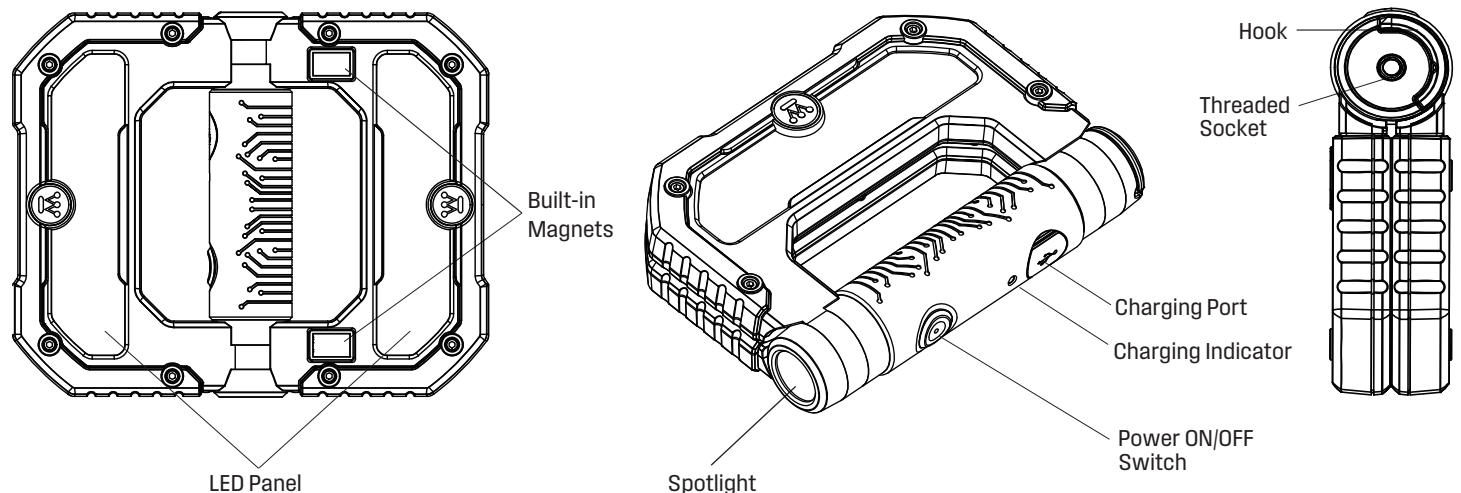 



SPECIFICATION

Internal Rechargeable Battery:	3.7V 2500mAh, 1 × 18650 Lithium-ion battery
Brightness:	LED Panel: 1000+1000 lm, Spotlight: 150 lm,
Runtime:	Spotlight: 20 hrs, Single COB: 4 hrs (High Brightness), 8 hrs (Strobe) Dual COB: 2 hrs (High Brightness), 3 hrs (Strobe)
Charging Time:	3.5-4.5 hrs
Charging Port:	Type-C 5.0V / 1.0A
Product Dimensions:	L×W×H: 20.6 × 16.7 × 3.6 cm / 8.1 × 6.6 × 1.4 in

OPERATING INSTRUCTIONS

1. Carefully unfold the LED panels.
2. Press the ON/OFF switch to choose the desired mode:

Press once - Spotlight ON (press and hold to dim 10%)

Press twice - Single COB LED panel ON (press and hold to dim 10%)

Press three times - Single COB LED panel strobing.

Press four times - Dual COB LED panels ON (press and hold to dim 10%)

Press five times - Dual COB LED panels strobing.

Press six times - Off

· If the switch is not operated for more than 10 seconds during operation, press the switch again to turn off the light.

· The light has a memory function for the last mode used.

· The work light can be attached to ferromagnetic surfaces using the built-in magnets on the front of the LED panels.

Caution: Ensure all magnets are in simultaneous contact with the mounting surface for a secure hold and to prevent the light from falling.

· The work light can also be hung using the integrated hook. Simply unhinge the hook from its recess at one end of the handle and hang it from ropes, pipes, or other suitable supports.

· The work light has a 1/4"-20 TPI BSW (British Standard Whitworth) screw thread located at the center of the hook recess, allowing it to be securely mounted on camera tripods or similar supports.

CHARGING

· This product comes partially charged. Before first use, fully charge the unit.

· The charging indicator is solid green when battery level is more than 10%, and turns solid red when battery level is less than 10%. At cutoff, the red indicator flashes, after cutoff, the light shuts down.

· The charging indicator turns solid red, the work light needs to be charged.

· Insert the USB type-C plug of the charging cable into the charging port of the unit.

· The indicator will illuminate solid red during charging, then turns solid green after battery is fully charged.



Westinghouse

2000 Lumen Foldable Rechargeable Work Light

Model: RMWK02001H-06B

CARE AND CLEANING

Turn the device off and disconnect any cable from the port before cleaning.

1. Clean the product with a soft, dry cloth. Do not use any form of abrasive cleaner or solvents to clean the unit.
Never dip the work light into liquids.
2. Fully charge the battery every 2-3 months when not in use.
3. Store the work light in a clean, dry and dark place. Do not expose the work light to temperatures below -15°C for long periods of time.

Caution: Never use a damaged product (e.g., worn cable, cracked casing).

TROUBLESHOOTING

A. The Product Does Not Operate

Check that the unit is fully charged. Recharge the internal battery if necessary.

Ensure the power ON/OFF button (1) is firmly pressed to turn the unit ON.

B. The Product Does Not Charge

Check that the USB charging cable/plug is properly connected to both the unit and the power source.

Confirm that the AC outlet or power source is functioning and delivering power.

ONE-YEAR LIMITED WARRANTY

This product is warranted against defects in materials or workmanship for one (1) year from the date of purchase.

This warranty is non-transferable and applies only to the original purchaser.

Proof of purchase is required for any repair or replacement under this warranty.

This warranty does not cover normal wear and tear or damage caused by misuse, including but not limited to:

- Using cleaners that contain chemicals, solvents, or harsh abrasives.
- Operating the product in extreme weather conditions.
- Opening, tampering with, modifying, or altering the product in any way.

Warranty Notice

To ensure full warranty coverage, this product must be purchased from an authorized retailer. Purchases made through unauthorized third-party sellers will void all warranty protections.

This includes eligibility for product replacements, repairs, or customer support. Please retain your proof of purchase from an authorized source.

DO NOT RETURN THIS PRODUCT TO THE STORE

If you have questions or need assistance, please email us at customerservice@cml.westinghouse.com or call customer service at 1-888-445-8974.

Ⓜ and Westinghouse are trademarks of Westinghouse Electric Corporation. Used under license by Rayman Lights, Inc. All Rights Reserved.



Westinghouse

2000 Lumen Foldable Rechargeable Work Light

Model: RMWK02001H-06B

FCC WARNING

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Company Name: Rayman Lights, Inc.

Company Address: 2020 Firedancer Ln, Bear, DE 19701, USA

Telephone Number: 1-888-445-8974