





Quick Start Guide

WD24HX5201 | WD32HX5201 | WD40FX5201

ASSEMBLY / MONTAJE / ASSEMBLAGE


What's included:

- A - TV Stand
- B - Screws
- C - Remote Control
- D - Batteries

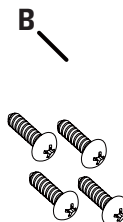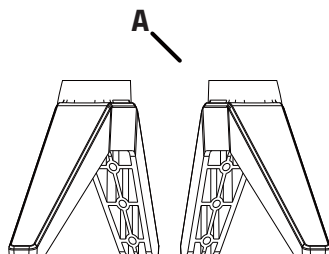


1. Installation of TV Stand

Place the legs into the bottom slots of the TV, insert and tighten the screws (found in the accessories bag) in the circled areas with the screwdriver (not provided).

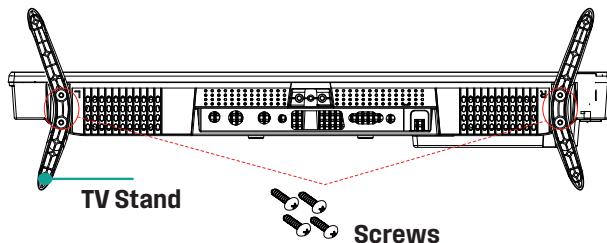

After securing the stand, place the TV on a stable surface. The TV is ready for use now.

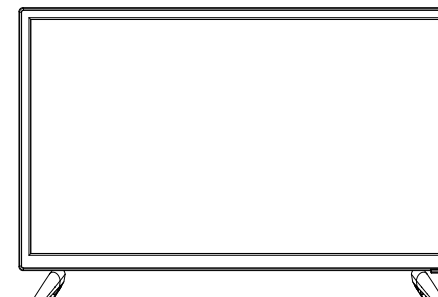

Tools you will need:




For customer support,
scan the QR code.
Para atención al cliente,
escanee el código QR.
Pour le support client,
scannez le code QR.




ASSEMBLY / MONTAJE / ASSEMBLAGE

2.If connecting to cable or satellite.

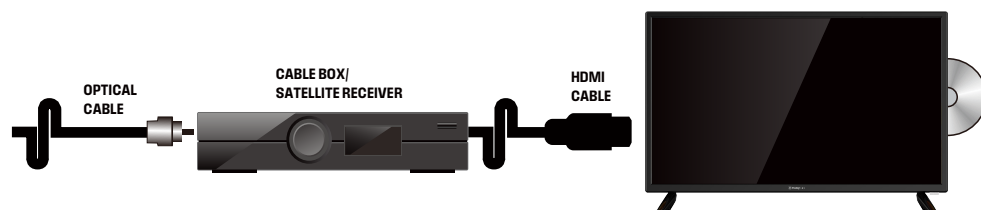


3.If connecting to DVD/BLURAY

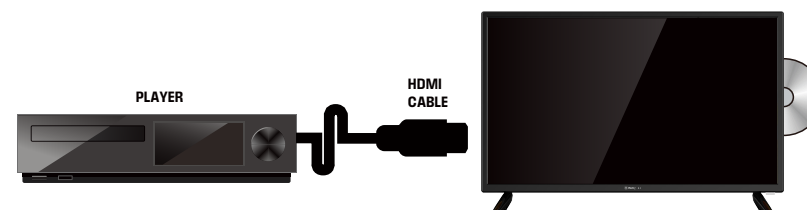

 No need to do Channel Scan. Press SOURCE and select the input source that you want (such as HDMI).

4.If connecting to an antenna.

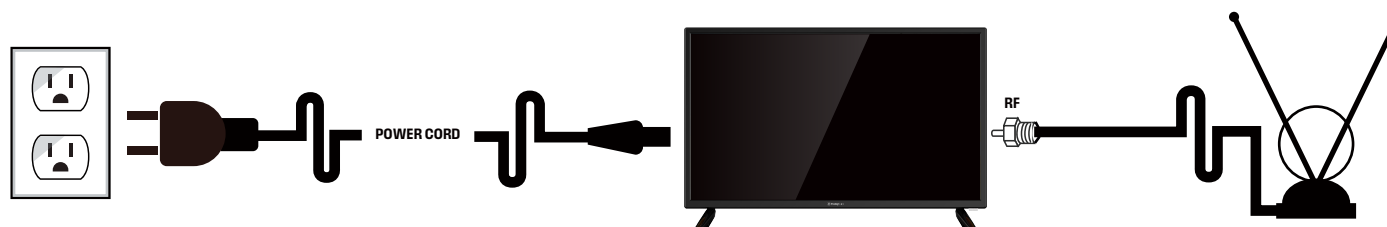

For channel scan refer to User Manual
Pour de canal se rapportent au manuel d'utilisation.
Para del canal refiere al manual del usuario.

Questions? Call (800) 701-0680 or
visit westinghouse.com/support

¿Tiene preguntas? Llame al (800) 701-0680 o visite westinghouse.com/support
Des questions? Téléphoner au (800) 701-0680 ou visitez westinghouse.com/support

HDMI[®]
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.