


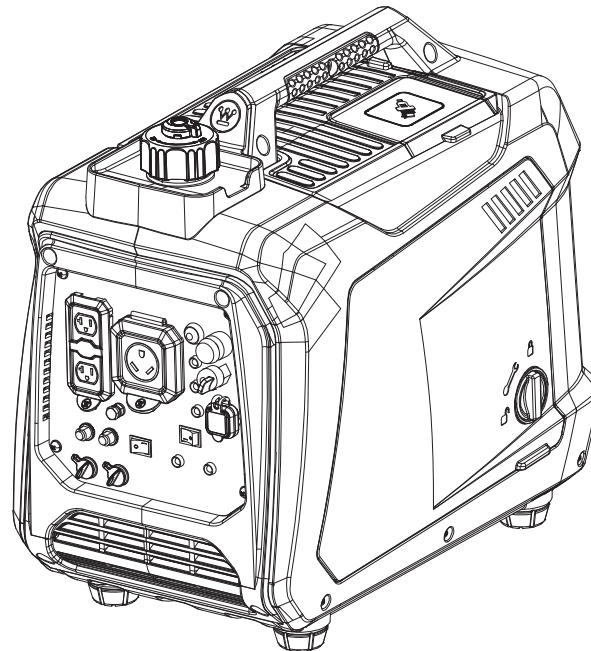

Replacement Parts List

iGen2550DFc




iGen2550DFc

WESTINGHOUSE OUTDOOR POWER EQUIPMENT

777 Manor Park Drive, Columbus, OH 43228 | WestinghousePortablePower.com
If you have questions or need assistance, please call customer service at 855-944-3571.

128074 07/25
iGen2550DFc Rev03

iGen2550DFc
Exploded View A
Generator

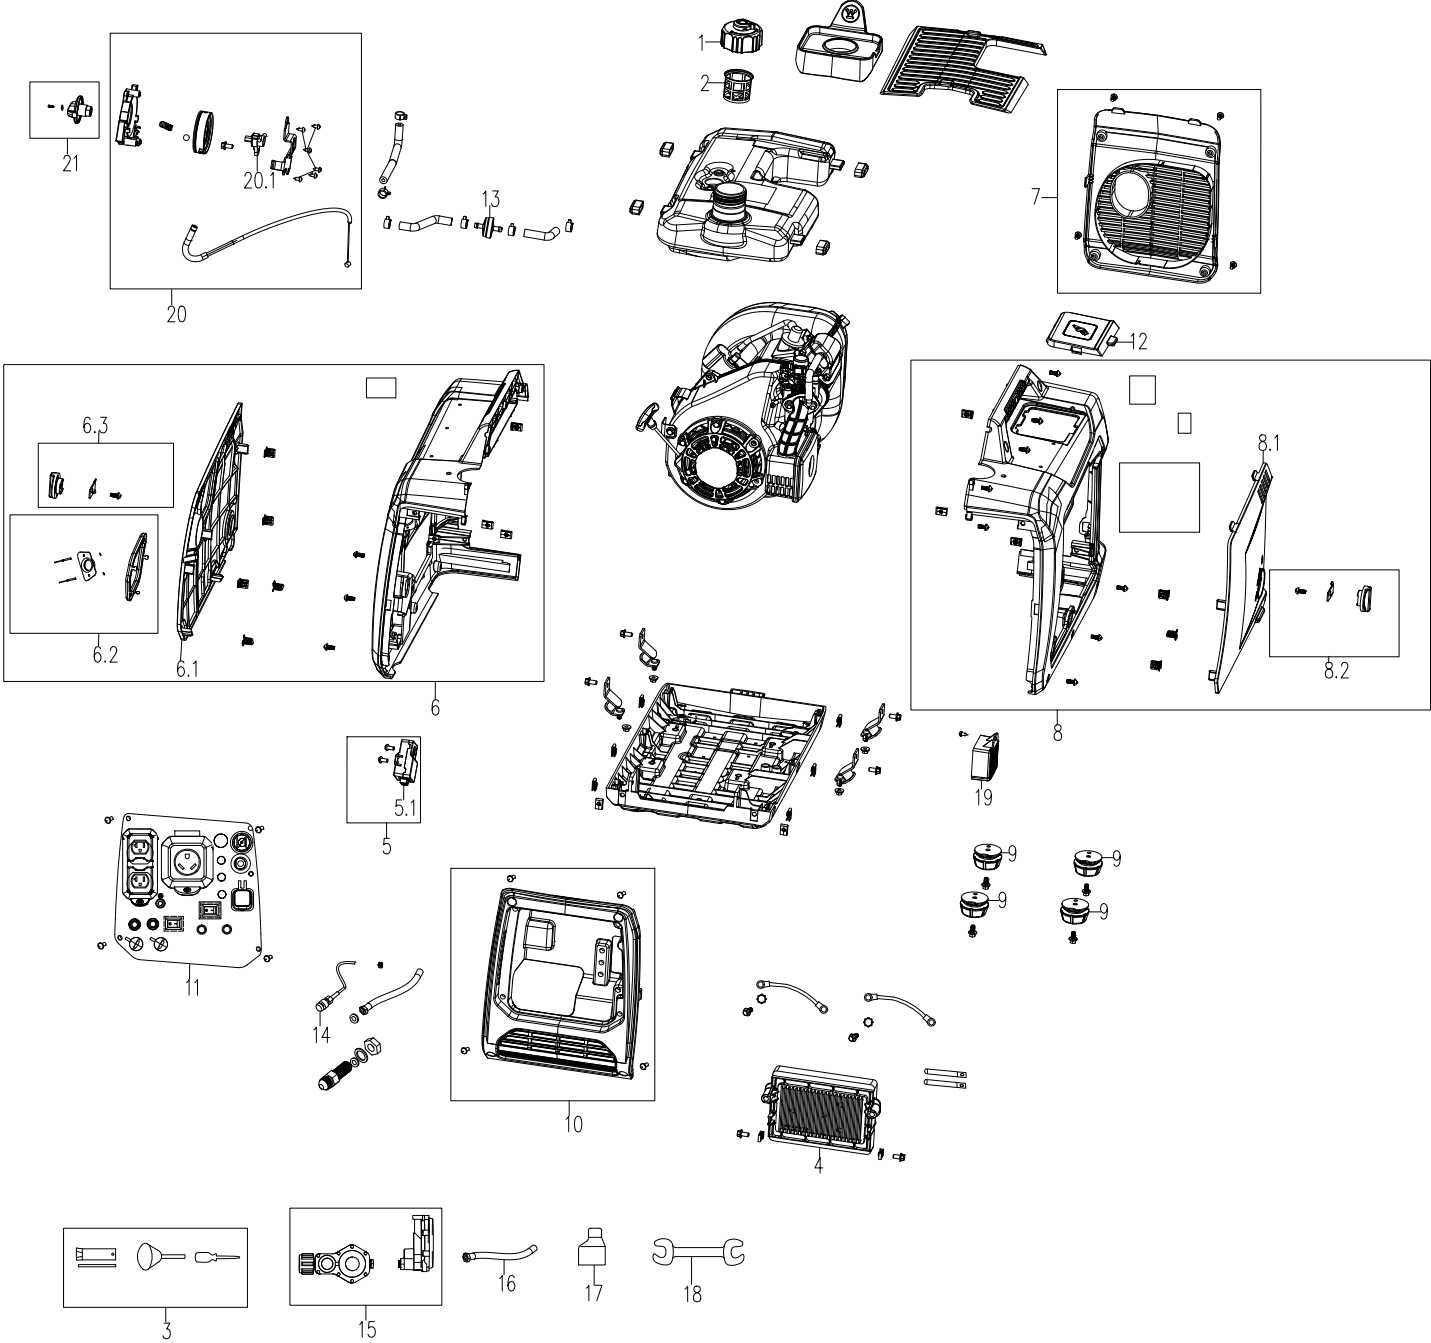


iGen2550DFc

Parts List A (Generator)

No.	Description	Part Num.
1	FUEL CAP	500005
2	FUEL STRAINER	500010
3	SPARK PLUG TOOL, FUNNEL, SCREW DRIVER KIT	100440014
4	INVERTER ASSEMBLY	100100024
5	CO MODULE KIT ASSEMBLY	100450027
5.1	CO MODULE	599098
6	LEFT PANEL KIT ASSEMBLY	100150074
6.1	LEFT PANEL	504621-221B
6.2	RECOIL DECORATION RING ASSEMBLY	100410004
6.3	KNOB KIT ASSEMBLY	100340017
7	MUFFLER PANEL KIT ASSEMBLY	100030010
8	RIGHT FRAME KIT ASSEMBLY	100280143
8.1	RIGHT PANEL	504539-221
8.2	KNOB KIT ASSEMBLY	100340017

No.	Description	Part Num.
9	ISOLATION PAD	504745
10	CONTROL PANEL BACK COVER KIT ASSEMBLY	100140034
11	PANEL ASSEMBLY	505600
12	OBSERVATION COVER	504542-126
13	FUEL FILTER	516401
14	CABLE	504809
15	PRESSURE REDUCING VALVE KIT ASSEMBLY	100010021
16	LOW PRESSURE HOSE	504934
17	OIL BOTTLE	99628
18	WRENCH	99585
19	DC VOLTAGE REGULATOR	504607
20	FUEL SWITCH KIT ASSEMBLY	100360044
20.1	FUEL SWITCH	504410
21	FUEL SWITCH KNOB ASSEMBLY	100340018

iGen2550DFc
Exploded View B
Control panel

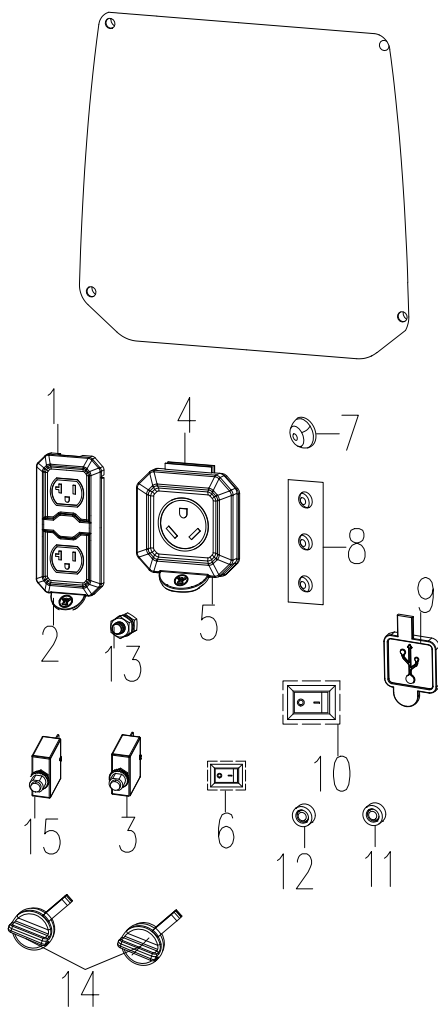


iGen2550DFc
Parts List B (Control panel)

No.	Description	Part Num.
1	L5-20R RECEPTACLE	6032
2	L5-20R DUST COVER	9194
3	30A THERMAL PROTECTOR	9414-30
4	TT-30R RECEPTACIE	6015
5	TT-30R DUST COVER	6849
6	ECO SWITCH ASSEMBLY	9421
7	OVERLOAD RESET SWITCH	9230
8	CO INDICATOR ASSEMBLY	9415

No.	Description	Part Num.
9	DUAL USB PORT	9400
10	ECO SWITCH ASSEMBLY	9421
11	CO SHUTOFF EVENT INDICATOR	9322
12	SERVICE INDICATOR	9326
13	GROUNDING BOLT	9074
14	PARALLEL SOCKET ASSEMBLY	9411
15	20A THERMAL PROTRCTOR	9414-20

iGen2550DFc
Exploded View C
Engine

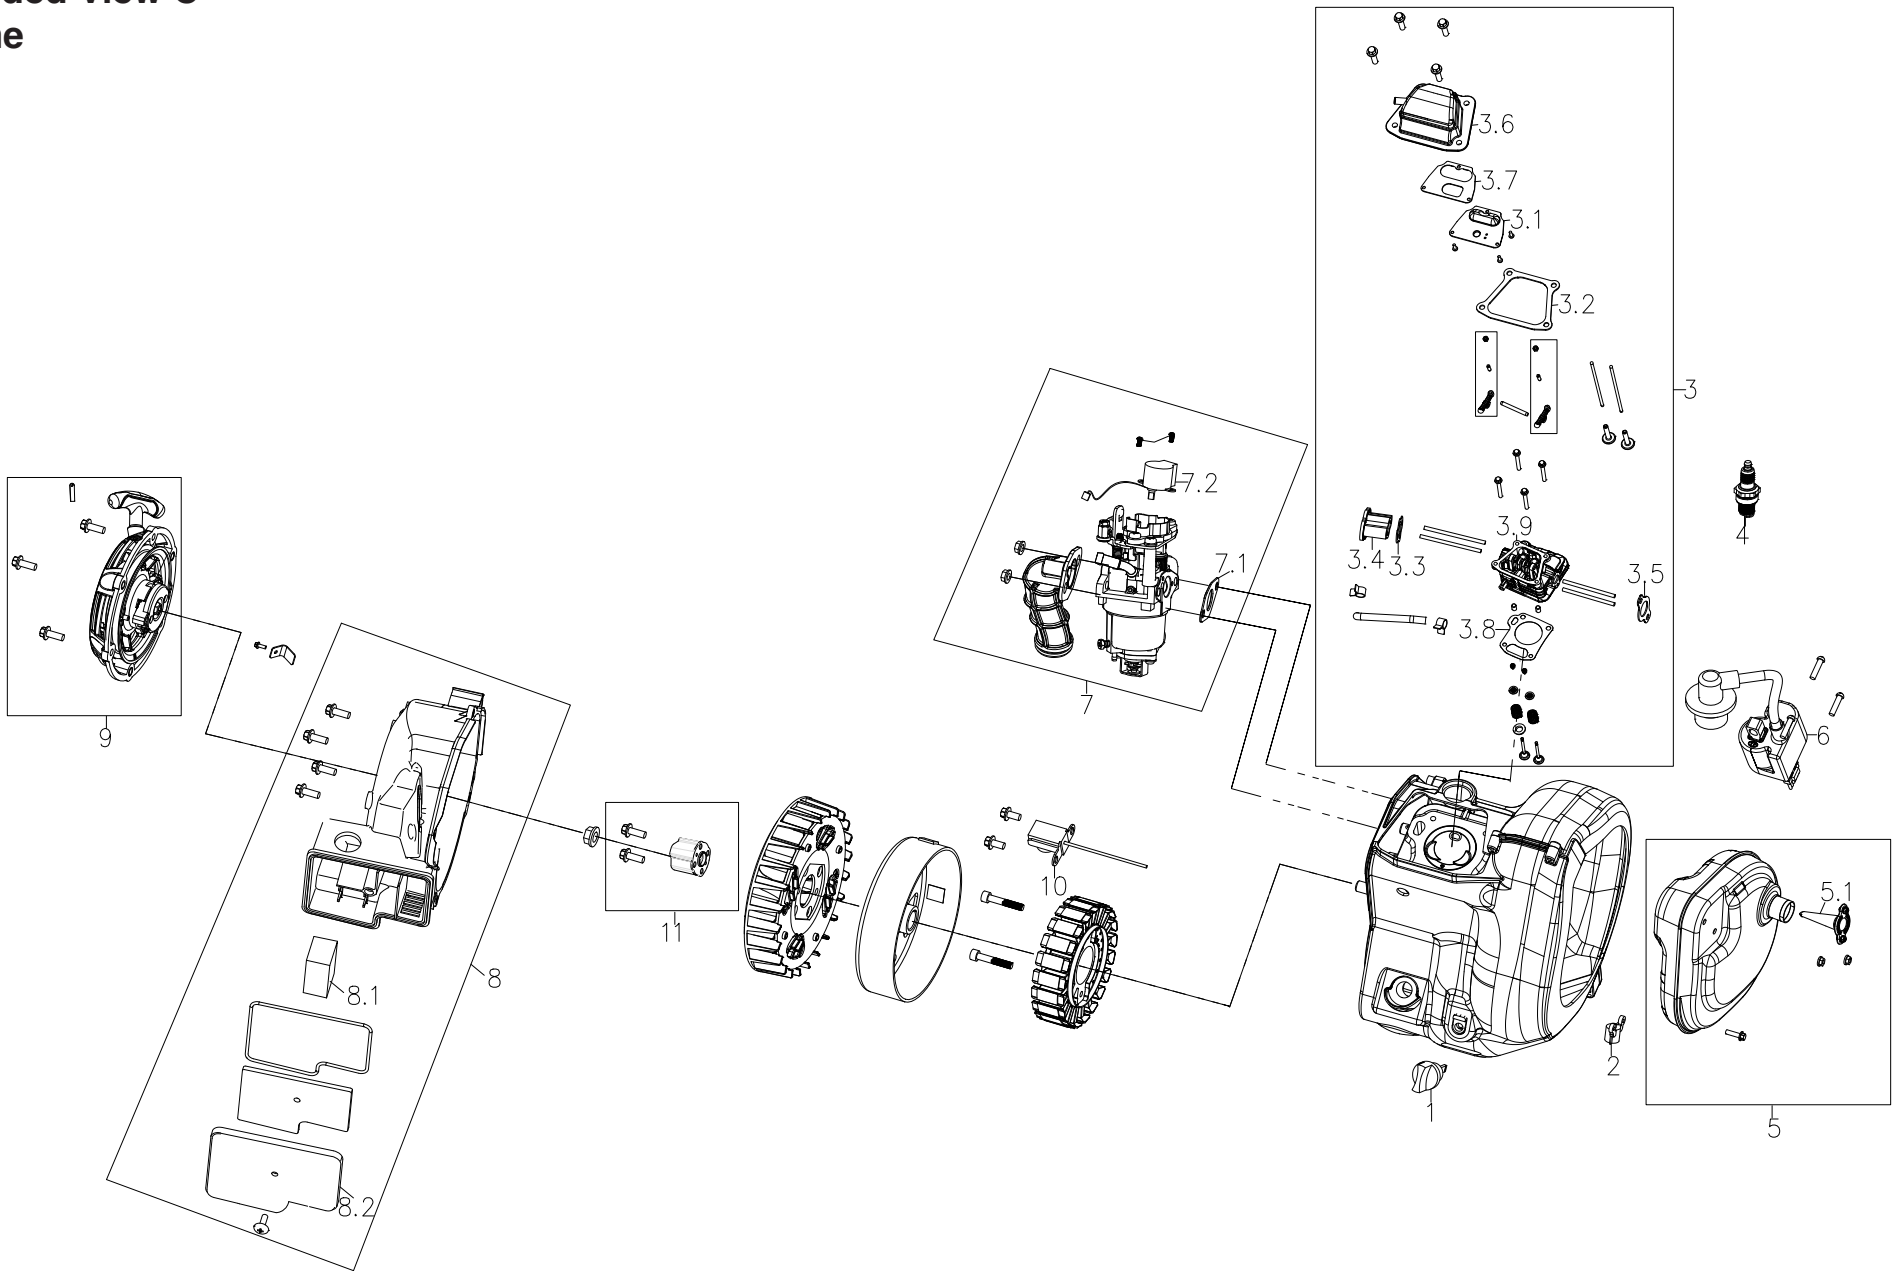

iGen2550DFc

Parts List C (Engine)

No.	Description	Part Num.
1	DIPSTICK ASSEMBLY	50350015
2	OIL SENSOR	345020
3	CYLINDER HEAD KIT ASSEMBLY	50020201
3.1	CYLINDER HEAD BREATHING PLATE	201103
3.2	CYLINDER HEAD COVER GASKET	96006
3.3	CYLINDER HEAD INTAKE GASKET	96007
3.4	CARBURETOR CONNECTION BLOCK	345010
3.5	EXHAUST GASKET	345029
3.6	CYLINDER HEAD COVER	345006
3.7	BTEATHING BOARD GASKET	201104
3.8	CYLINDER HEAD GASKET	96005
3.9	CYLINDER HEAD	345003
4	SPARK PLUG	97101

No.	Description	Part Num.
5	EXHAUST MUFFLER KIT ASSEMBLY	50240029
5.1	SPARK ARRESTER	6967
6	IGNITION COIL	345016
7	CARBURETOR KIT ASSEMBLY	50040253
7.1	CARBURETOR INTAKE GASKET	96121
7.2	STEPPER MOTOR	345026
8	BLOWER HOUSING KIT ASSEMBLY	50590039
8.1	AIR FILTER	2221
8.2	AIR FILTER COVER	2222
9	RECOIL KIT ASSEMBLY	50580051
10	IGNITION TRIGGER	345022
11	MOTOR STATOR CUP ASSEMBLY	50180043