




WSnow18 48V REPLACEMENT PARTS LIST

Snow blower-cordless

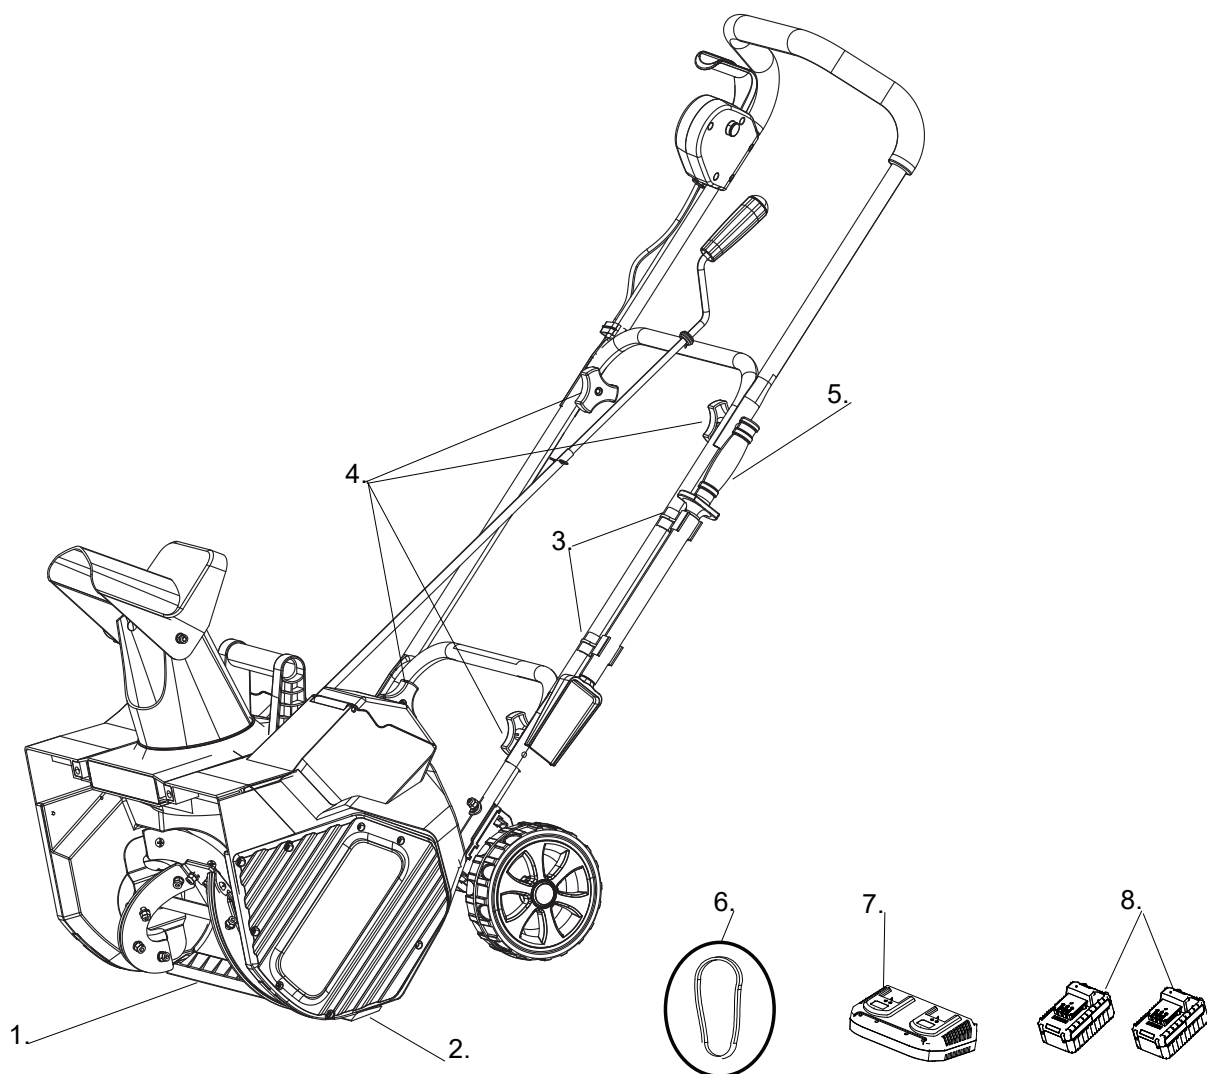

Index Number	Description	Part Number
1	AUGER	1000380000
2	SCRAPER BLADE	1051045000
3	CHUTE CLEANER HANGER	1051051000
4	HANDLE KNOB	1054450000
5	CHUTE CLEANER	1056625000
6	BELT	1400228000
7	24V 2.0AH BATTERY	W24V2AH
8	24V 2.2Amp DUAL PORT CHARGER	W24V2DP