
WSNOW14S 24V REPLACEMENT PARTS LIST

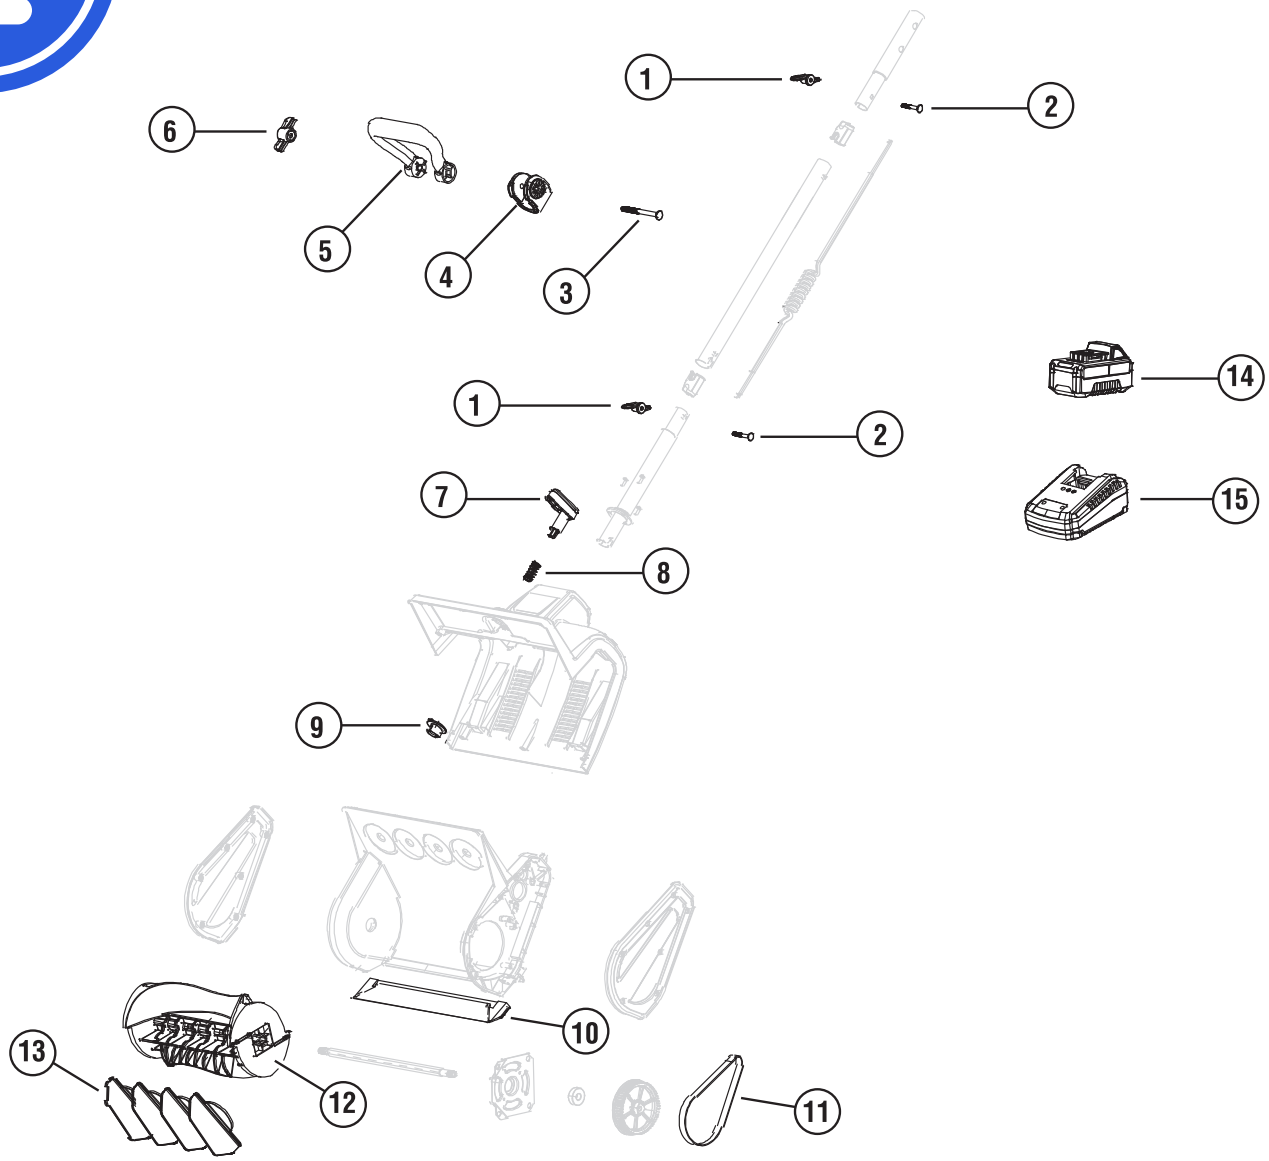

Index Number	Description	Part Number
1	Joint-fixing knob	WS14SB0017
2	Bolt	WS14SB0016
3	Bolt	WS14SB0021
4	Handle seat	WS14SB0022
5	Auxillary handle	WS14SB0023
6	Handle knob	WS14SB0024
7	Directional chute lever	WS14SB0027
8	Spring	WS14SB0028
9	Block	WS14SB0030
10	Scraper blade	WS14SB0059
11	Auger belt	WS14SB0061
12	Auger	WS14SB0066
13	Auger blades	WS14SB0067
14	Battery	W24V4AH
15	Charger	W24V2AMP

www.westinghouse.com
Service Hotline (855) 944-3571
777 Manor Park Drive, Columbus, OH 43228
and Westinghouse are trademarks of Westinghouse Electric Corporation.
Used under license by Westinghouse Outdoor Power Equipment.
© 2026 Westinghouse Outdoor Power Equipment, All Rights Reserved.